



## Rechargeable Pet Trimmer

MC-230


# PROFESSIONAL Trimmer

To ensure you achieve the best possible use of your trimmer please read and comply with the following instructions.

### Specifications

Charging time : 1 hours  
Operation time : 1.5 hours  
Blade width : 32 mm  
Dimensions : 145(H)×33(W)×34(D)mm  
Weight : 96 grams

### Component Name

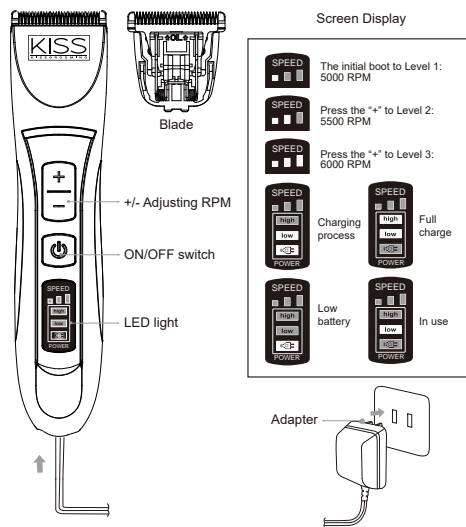

### Accessories



Comb



Cleaning Brush



Oil Bottle

Owner's Guide

## SAFETY CAUTION

### Keep Away from Water and Liquids

1. Use this appliance for its intended purpose. Use only on clean, dry hair.
2. Close supervision is necessary when this appliance is by or near children.
3. Use only with accessories included in the package, (or those recommended by the manufacturer).
4. Avoid contact with the eye area. Do not use on open wounds; damaged or sensitive skin.
5. Except when charging, always unplug from the electrical socket after use.
6. Keep away from water, liquids or any detergent agents.
7. To avoid cord damage, do not pull, twist or wrap the cord tightly.
8. Charging should be done indoors and in a cool dry place.
9. The charger adaptor must be kept dry at all times.

**Should the following situations occur, unplug and switch off immediately, and send for examination or repair.**

1. The blade, main unit, power cord or attachment comb is damaged.
2. The clipper or the adapter is dropped into water or liquid.
3. The clipper is switched off, but the charging indicator does not light up when plugged into the power source.

\*The clipper and accessories must be checked regularly for damage. If damage is detected, do not put the device into operation.

## IMPORTANT NOTICE

### Blade

1. The blade must be lubricated before and after each use. This will maintain it in good condition and will extend its service life.
2. Non - stop usage for hours may cause overheating of blades, reducing the cutting performance and shortening their life. Should the blades overheat, switch the unit off for a few minutes to let it cool down and lubricate the blades.
3. Hair must be clean and dry before cutting. Foreign matter hidden in the hair may damage the blade edge.
4. Hair may gather inside the blade housing during use. Too much stored hair will reduce the oscillating ability of the blades and cause malfunctioning.

**Clean up hair in the blade housing before and after each use.**

5. Avoid impact of the blade with hard objects as this may cause damage to the blade teeth.

### Battery

1. Do not overcharge. It takes (an estimate of) 1 hour to charge your trimmer. Charging more than 36 hours may shorten the life of the battery.
2. The life of the battery will be shortened if the trimmer remains uncharged for long periods. Charge unused clippers every 3 months to activate and maintain the battery.
3. It is normal for the adapter and the internal parts to become warm when charging.

### Others

1. Use or store the trimmer only at room temperature. Avoid direct sunlight, moisture or heated surfaces. Operating range 0 - 40 °C.
2. Do not attempt to unscrew any part of the trimmer.

## OPERATING INSTRUCTIONS

### Changing

1. Icon "↻" can be seen on LCD screen to remind you of charging.
2. Connect the charging cord to the charging slot at one end of clipper.

3. Confirm that the switch is off and insert the plug.
4. Charging indicator "low" & "↻" can be seen on LCD.
5. It will automatically stop after a full charge; both icons "low" & "high" can be seen on LCD.
6. A full charging takes about 1 hour. The battery will reach optimum performance after three charges.

Recharging time: 1 hour

Cordless operation time: 1.5 hours (5000RPM)

### Cord Operation

This trimmer can be operated electrically by plugging it into the power source (when the battery is not fully charged).

1. Turn power switch off.
2. Connect the adapter to the wall socket.
3. Connect the DC plug to the clipper.
4. Check if the charging indicator is lit.
5. Switch on to operate.

### Caution

\* Except for the purpose of charging, always switch off and unplug the adapter from the wall socket after use.

\* Do not frequently use the clipper plugged in without having recharged the battery, as this may reduce the life of the battery.

\* Charge at room temperature between 5 °C and 35 °C.

### Battery Condition Indicator

The "↻" icon will twinkled when the available time is only 5 mins left, to remind you charging or connecting wires in time.

## MAINTENANCE

**Always switch off before removing, replacing and cleaning the blade.**

### Removing and Cleaning the Blade

1. Remove the blade set from the blade housing by pressing the top cutting head with your thumb.
2. Brush off the residual collected hair thoroughly from between the teeth and the blade housing.
3. Move the oscillating bracket with your thumb to separate stored hair from the blades. Brush off the hair between the blades. Make sure hair is not trapped between the blades.

### Lubricating the Blade

- Lubricate both friction surfaces of the front cutting teeth and the hind supporting areas.
1. Hind supporting areas: push the oscillating part to one side: lubricate the visible friction surface on the other side. Drop a small amount of oil on both sides.
  2. Front cutting teeth: Drop a small amount of oil on the blade teeth and spread evenly. Slightly move the oscillating part to spread the oil between the blades.

### Replace the Blade

1. To replace the blade set, put the bottom of the blade set clip into the blade set Mount on the blade housing.
2. Push until it snaps into place.

### Cleaning the Main Body and Accessories

1. Switch off and unplug the trimmer before cleaning.
2. Wipe with a soft damp cloth.
3. Allow it to air dry before use.

## COMB ATTACHMENTS

You may adjust the cutting length from 3 - 6mm by attaching the comb attachment.

1. The cutting length is marked on the comb attachments.
2. Select a suitable size (for the length desired) and slide the blade into the comb attachment.

## BLADE LIFE

\*The service life of the blade may be shortened in the following situations:

1. The blade has not been lubricated properly over a long period.
2. The blade cuts unclean hair or objects other than hair.
3. A foreign object damages the blade edge.
4. The blade is subjected to an impact.

If the cutting efficiency is reduced substantially despite proper maintenance, the blade has exceeded its service life and should be sharpened or replaced.

## MOTOR LIFE

\*No maintenance is required for the motor.

\*Professional DC motor.

\*The service life of the motor may be shortened in the following situations:

1. The clipper is stored in humid surroundings for long periods.
2. The blade has not been lubricated properly.
3. Stored hair in the blade housing has not been cleaned properly.
4. An incorrect power source is used.

## BATTERY LIFE

\* The service life expectancy of the battery is approximately 3000 recharging cycles.

After that the charge will gradually drain and the power will be reduced.

\* The service life of the battery may be shortened in the following situations:

1. The battery is stored in humid surroundings for long periods.
2. The battery is overcharged.
3. The battery is over depleted (when the battery is out of power, the clipper is kept in the switched - on position for long periods).
4. The trimmer is always used plugged in.
5. The trimmer has not been charged for more than 3 months.

\* When not in regular use, it is recommended to recharge the battery at least every 3 months.

\* If cordless operation lasts for less than 10 minutes, despite proper charging, the battery has exceeded its service life and should be replaced.

The classic clippers are manufactured to comply with all relevant standards and product requirements.

## ENVIRONMENTAL DISPOSAL

It is the owner's responsibility to dispose of the clippers in a reasonable manner after their useful life. Do not dispose of in household waste.

The clipper can be returned to the place of purchase for recycling, or taken to your local authority waste disposal site.

